

5 Connection steps on iPad:

- (1) Please ensure that the iPad has Bluetooth;
- (2) Please hold on the button on scanner for 10 seconds until the light turn to blue.

Then you have got into the pairing mode. Or scan the following barcode (shown in Figure 1) to change into the pairing mode.

- (3) Please enter into the “general” option, then choose “Bluetooth”and “open”, as shown in Figure27,28.

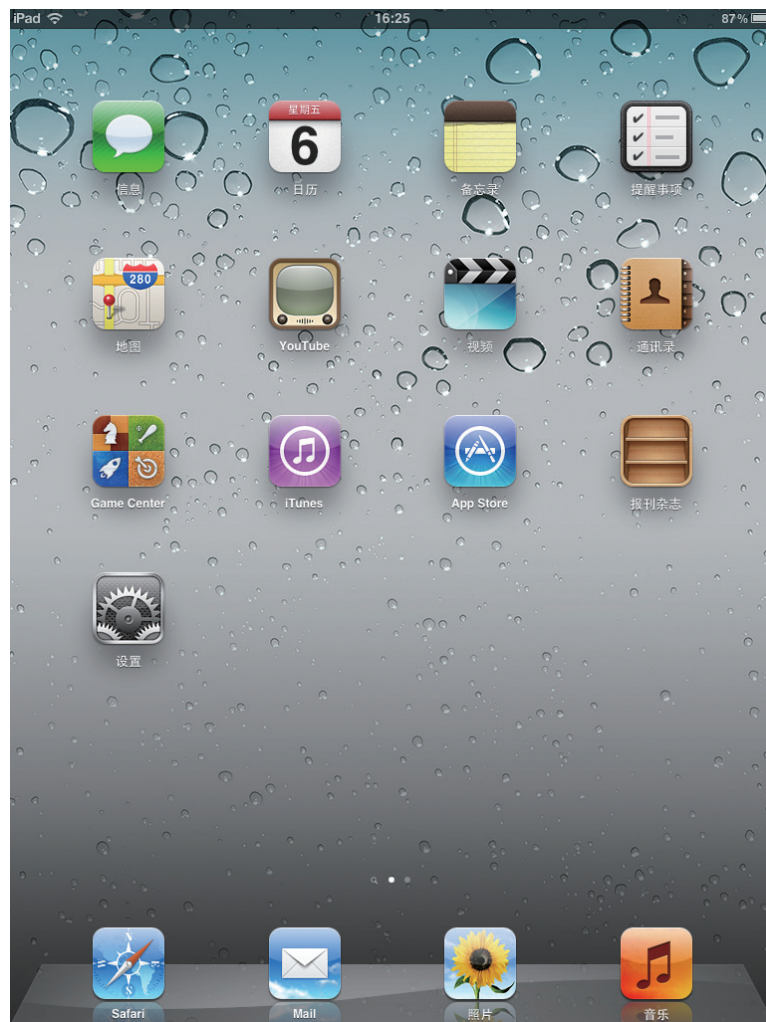


Figure 27



Figure 28

(4) iPad will automatically search for Bluetooth devices within 10 meters, and displayed on the screen, as shown in Figure 29;



Figure 29

- (5) Select “MS3391-HID “from the list, and they will pair automatically. If pairing is successful, it will show as Figure 30,31.



Figure 30



Figure 31

(6) After a successful connection, the scanning device can be used, and the decoded data will be displayed on the phone screen, shown in Figure 32.

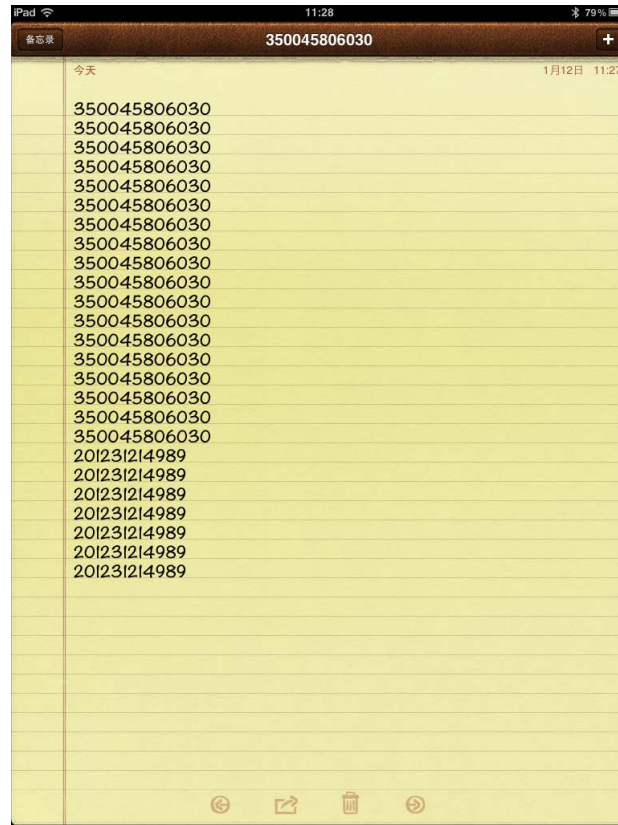


Figure 32